

STONE COAT COUNTERTOPS

Blue and Black Melded Marble Step by Step.


Step 1: Apply 2 coats of paint and primer in one, sand and each coat with 220 grit. Let the paint fully dry.



Step 2: Wipe the dust with a paper towel.



Step 3: Mix A 1:1 Ratio for 2-3 min. Scrape the sides and bottom of the bucket. Use 3-4 ounces per square foot for this technique. Best temperature should be 65-80.

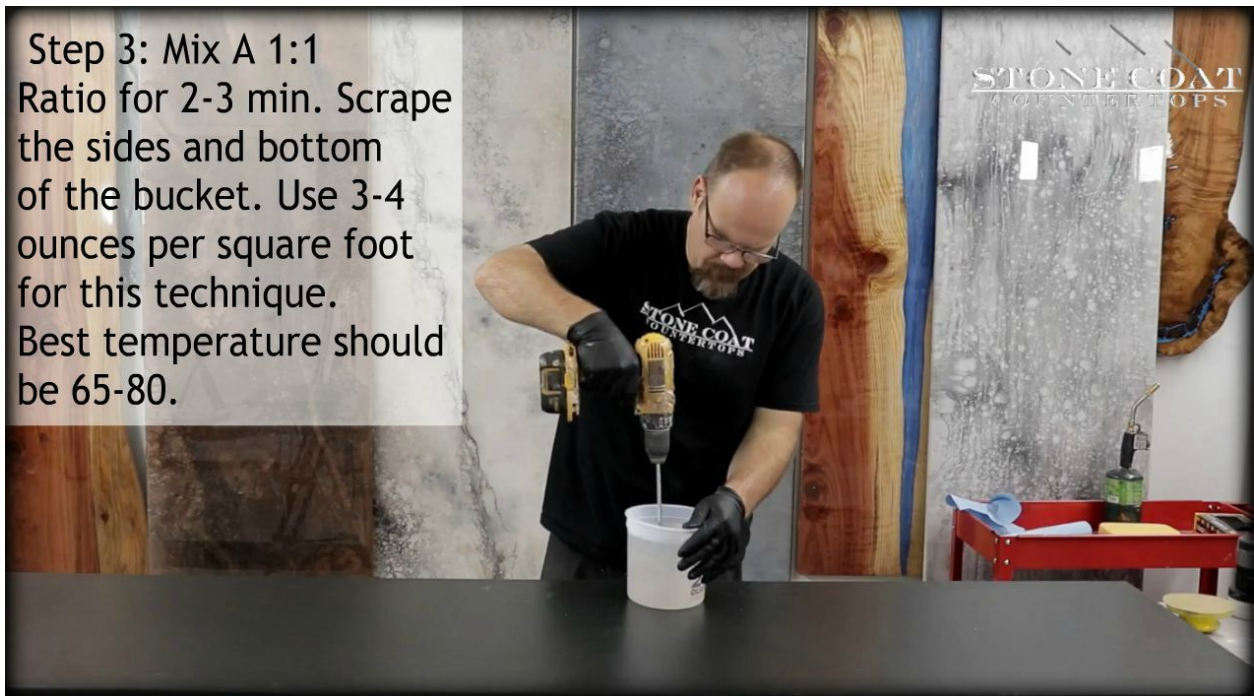





Step 6: Pour each color out on the piece in a random fashion.



Step 7: Skip trowel your sponge across the surface in a random movement. Be sure to get epoxy to cover the whole surface.

Step 8: Use your gloved hand or a sponge to coat the edges of your piece. Long horizontal strokes work best.



Step 9: Torch the epoxy to remove bubbles and move the colors to create a look you desire. Sweep the surface 3 times.



Step 10: Use your gloved finger to move epoxy into areas that are still bare. Re-torch the surface after this step.



Step 11: Watch our video on how to do a clear coat. Do this step after 24 hours of this color coat. Begin light use of your new surface in 3 days, normal use in 7 days, and full heat resistance in 30 days.
YOU GOT THIS!

Call anytime for free project support. (541) 450-1976